
Solidbase 2 mm: 8 x 1 m (8 m²)

Art. nr - 68135

Scan this QR code to view this product on our website.

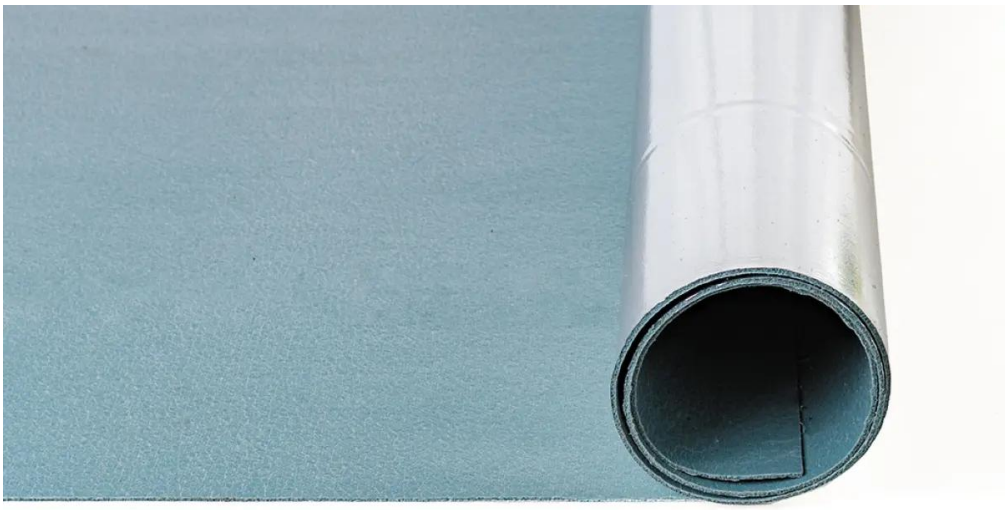

Installation instruction

- Let the underfloor, like the floor to be installed, acclimatize for at least 24 hours in the closed packaging in the room where it will be installed.
- The ideal humidity level for installation is between 50–70% and the working temperature is 15–20 degrees Celsius.
- Work clean and ensure that the subfloor is completely free of debris, dust-free, and dry before installation.
- For cutting the underfloor, we recommend a standard trapezoid snap-off knife.
- Installation: at right angles to the laying direction of the floor covering. Ensure that the joints in the underlay and the floor covering do not coincide.
- The underfloor cannot prevent the natural movement of an upper floor; therefore, we recommend always keeping a space of 8–10 mm between the floor and the wall.

- Always follow the installation advice of the manufacturer of the upper floor to avoid problems during installation.

Top side

Floating installation with the moisture barrier facing upwards. Tape the seams.

Disclaimer

If the installation instructions are not followed, Estillon cannot be held liable for damage and/or claims arising from incorrect installation. If in doubt, always consult your supplier.