


# Solidbase 2 mm: 8 x 1 m (8 m<sup>2</sup>)

Art. nr - 68135

**estillon**  
WE WILL IMPROVE YOUR FLOOR

Scan this QR code to view this product on our website.

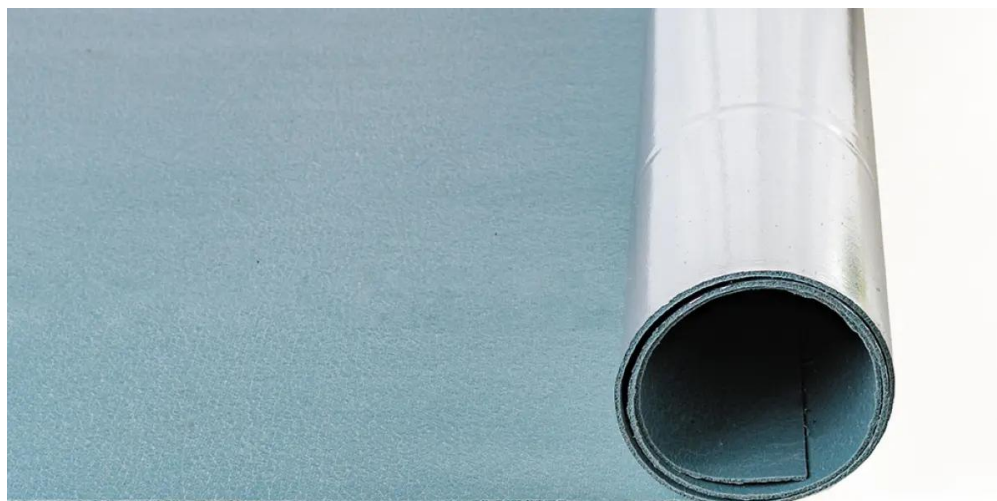

## Installation instruction

- Let the underfloor, like the floor to be installed, acclimatize for at least 24 hours in the closed packaging in the room where it will be installed.
- The ideal humidity level for installation is between 50–70% and the working temperature is 15–20 degrees Celsius.
- Work clean and ensure that the subfloor is completely free of debris, dust-free, and dry before installation.
- For cutting the underfloor, we recommend a standard trapezoid snap-off knife.
- The underfloor cannot prevent the natural movement of an upper floor; therefore, we recommend always keeping a space of 8–10 mm between the floor and the wall.
- Always follow the installation advice of the manufacturer of the upper floor to avoid problems during installation.

# Solidbase 2 mm: 8 x 1 m (8 m<sup>2</sup>)

Art. nr - 68135



## Top side

Floating installation with the moisture barrier facing upwards. Tape the seams.

## Disclaimer

If the installation instructions are not followed, Estillon cannot be held liable for damage and/or claims arising from incorrect installation. If in doubt, always consult your supplier.