


# PE Silver 2 mm: 15 x 1 m (15m<sup>2</sup>)

Art. nr - 68815

**estillon**  
WE WILL IMPROVE YOUR FLOOR

Scan this QR code to view this product on our website.

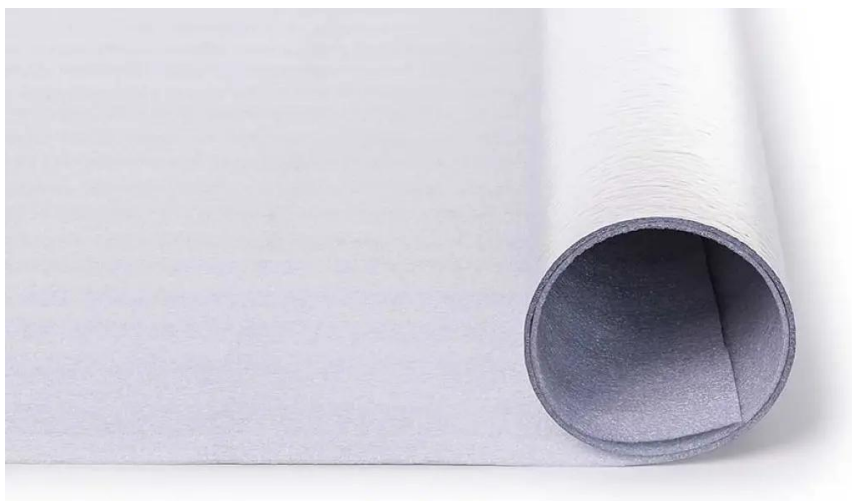

## Installation instruction

- Always allow the underfloor, like the floor to be installed, to acclimate for at least 24 hours in the closed packaging in the room where it will be installed.
- The ideal humidity for the installation of a parquet or laminate floor is between 50–70% and the processing temperature is 15–20 degrees Celsius.
- Ensure that the substrate is completely free of debris, dust-free, and dry before installation.
- Floating installation with the moisture barrier facing down. Tape the seams.
- For cutting the underfloor, we recommend a standard trapezoid retractable knife or a carpet knife.
- An underfloor cannot prevent a floor from expanding and contracting.
- We advise always following the installation advice of the floor supplier.

# PE Silver 2 mm: 15 x 1 m (15m<sup>2</sup>)

Art. nr - 68815



## Top side

Floating installation with the moisture barrier facing downwards.

## Disclaimer

If the installation instructions are not followed, Estillon cannot be held liable for damage and/or claims arising from incorrect installation. If in doubt, always consult your supplier.