


# Solidbase Alu 2 mm: 8 x 1 m (8 m<sup>2</sup>)

Art. nr - 681351

**estillon**  
WE WILL IMPROVE YOUR FLOOR

Scan this QR code to view this product on our website.

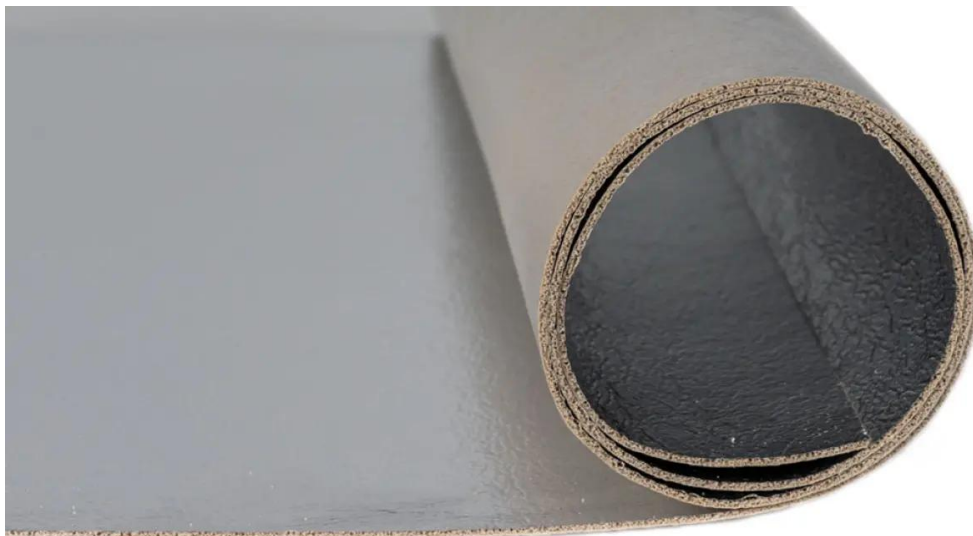

## Installation instruction

- Allow the top floor and subfloor to acclimatize for at least 24 hours in the original packaging in the room where they will be installed.
- The ideal temperature for installation is 15–20 degrees Celsius with a humidity of 50–70%.
- Ensure that the subfloor is completely dry and free from grit and dust (EN 18365/18202).
- For cutting the subfloor, we recommend using a trapezoid break-off knife.
- The subfloor cannot prevent the natural shrinkage or expansion of the top floor. Therefore, we recommend keeping a gap of 8–10 mm along all walls and construction parts (such as walls, pipes, and door frames).
- Always follow the installation instructions of the top floor's manufacturer.

### Top side

# Solidbase Alu 2 mm: 8 x 1 m (8 m<sup>2</sup>)

Art. nr - 681351



Floating installation with the moisture barrier facing upwards. Tape the seams.

## Disclaimer

If the installation instructions are not followed, Estillon cannot be held liable for damage and/or claims arising from incorrect installation. If in doubt, always consult your supplier.