


Solidbase SK 2 mm: 8 x 1 m (8 m²)

Art. nr - 681371

estillon
WE WILL IMPROVE YOUR FLOOR

Scan this QR code to view this product on our website.

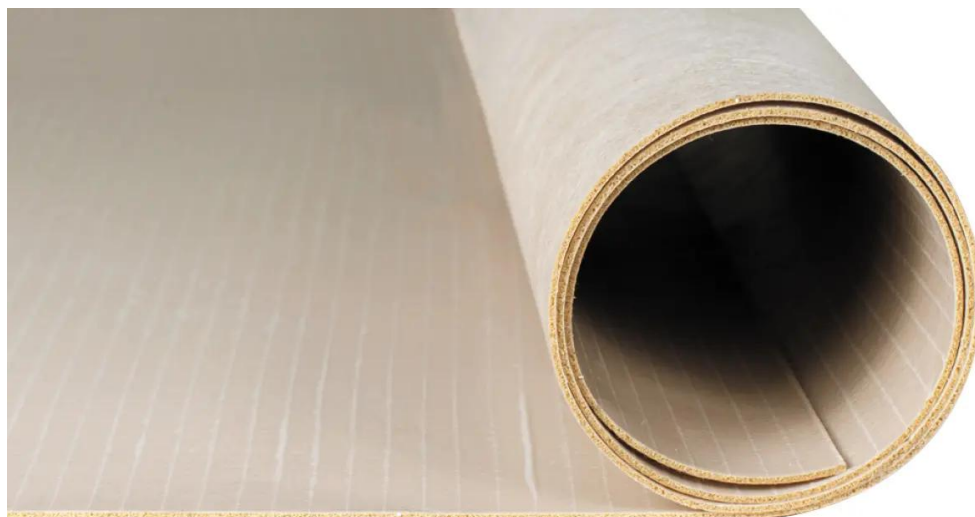

Installation instruction

- Allow the upper floor and the subfloor to acclimatize for at least 24 hours in the original packaging in the room where they are to be installed.
- The optimal temperature for installation is 15–20 degrees Celsius with a humidity of 50–70%.
- Ensure that the subfloor is completely dry and free of debris and dust (EN 18365 and EN 18202).
- For cutting the subfloor, we recommend using a trapezoidal knife.
- After laying, roll out the entire floor with a heavy roller weighing 50 kg.
- An expansion joint should be provided between different rooms and structures (such as walls, pipes, and door frames).
- For south-facing windows or conservatories, always ensure proper sun protection to avoid temperature differences that can be caused by direct sunlight.

Solidbase SK 2 mm: 8 x 1 m (8 m²)

Art. nr - 681371

estillon
WE WILL IMPROVE YOUR FLOOR

- The subfloor cannot prevent the natural shrinkage or expansion of the upper floor. Therefore, we advise keeping a space of 8–10 mm along all walls and structures (walls, pipes, door frames, etc.).
- Always follow the installation instructions from the manufacturer of the upper floor.

Top side

Floating installation with the self-adhesive layer facing upwards. Removing the foil requires extra care: loosen the foil with the tip of a knife. Do not loosen it at the corner, as this may cause the self-adhesive layer to fully delaminate.

Disclaimer

If the installation instructions are not followed, Estillon cannot be held liable for damage and/or claims arising from incorrect installation. If in doubt, always consult your supplier.