
Solidbase SD 1.5 mm: 10 x 1 m (10 m²)

Art. nr - 688381

Scan this QR code to view this product on our website.

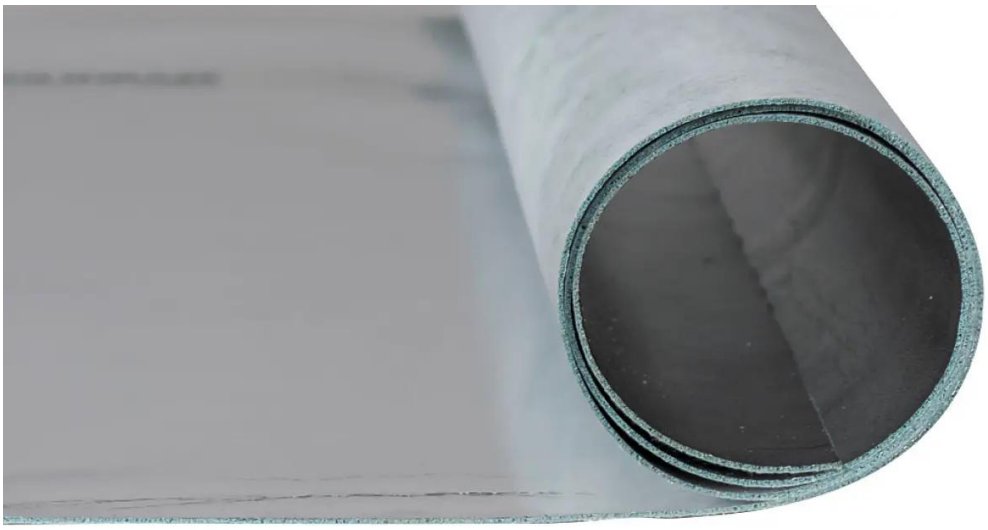

Installation instruction

- Allow the upper floor and underlay to acclimate for at least 24 hours in the original packaging in the room where they will be installed.
- The best temperature for installation is 15–20 degrees Celsius with a relative humidity of 50–70%.
- Ensure that the subfloor is completely dry and free of debris and dust (EN 18365 and EN 18202).
- We recommend using a trapeze knife to cut the underlay.
- Installation: at right angles to the laying direction of the floor covering. Ensure that the joints in the underlay and the floor covering do not coincide.
- The underlay cannot prevent the natural shrinking or expansion of the flooring material. Therefore, we recommend leaving a space of 8–10 mm along all walls and structural parts

(such as walls, pipes, and door frames).
- Always follow the installation instructions of the upper floor manufacturer.

Top side

Floating installation with the moisture barrier facing upwards. Tape the seams.

Disclaimer

If the installation instructions are not followed, Estillon cannot be held liable for damage and/or claims arising from incorrect installation. If in doubt, always consult your supplier.