


# Solidbase SD 1,5 mm: 10 x 1 m (10 m<sup>2</sup>)

Art. nr - 688381

**estillon**  
WE WILL IMPROVE YOUR FLOOR

Scan this QR code to view this product on our website.

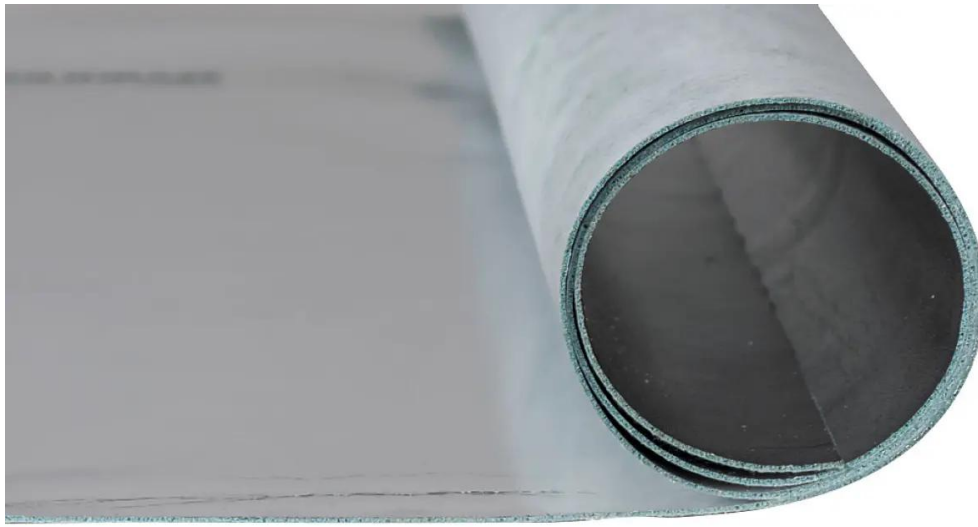

## Installation instruction

- Allow the upper floor and underlay to acclimate for at least 24 hours in the original packaging in the room where they will be installed.
- The best temperature for installation is 15–20 degrees Celsius with a relative humidity of 50–70%.
- Ensure that the subfloor is completely dry and free of debris and dust (EN 18365 and EN 18202).
- We recommend using a trapeze knife to cut the underlay.
- The underlay cannot prevent the natural shrinking or expansion of the flooring material. Therefore, we recommend leaving a space of 8–10 mm along all walls and structural parts (such as walls, pipes, and door frames).
- Always follow the installation instructions of the upper floor manufacturer.

# Solidbase SD 1,5 mm: 10 x 1 m (10 m<sup>2</sup>)

Art. nr - 688381



## Top side

Floating installation with the moisture barrier facing upwards. Tape the seams.

## Disclaimer

If the installation instructions are not followed, Estillon cannot be held liable for damage and/or claims arising from incorrect installation. If in doubt, always consult your supplier.