


# Duralay Technics 6 mm: 11 x 1,37 m (15,07 m<sup>2</sup>)

Art. nr - 68620

**estillon**  
WE WILL IMPROVE YOUR FLOOR

Scan this QR code to view this product on our website.

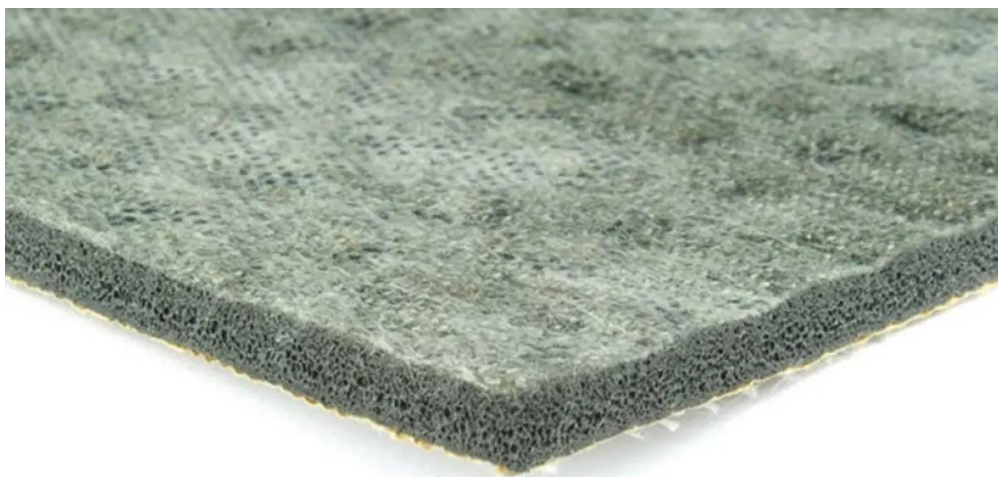

## Installation instruction

Installation methods:

click here: <https://www.interfloor.com/installation-methods/>

- Consider the risk of complaints when using a tackifier/anti-slip adhesive instead of a full double bonding, where both the subfloor and the back of the carpet are fully bonded with a universal carpet adhesive.
- A tackifier does not provide the same dimensional stability, adhesion strength, and durability as a double bonding system.
- In high-traffic applications, we do not recommend using a tackifier due to the risk of insufficient adhesion, premature wear and functional failure of the floor system.

## Duralay Technics 6 mm: 11 x 1,37 m (15,07 m<sup>2</sup>)

Art. nr - 68620



- Always follow the installation advice of the carpet manufacturer and the adhesive manufacturer to avoid problems during the installation.

If the installation instructions are not followed, Estillon cannot be held liable for any damage and/or claims resulting from incorrect installation. In case of doubt, always consult your supplier.