


# Floorfixx regular 9 mm: 120 cm x 60 cm (2,88 m<sup>2</sup>)

Art. nr - 62200

**estillon**  
WE WILL IMPROVE YOUR FLOOR

Scan this QR code to view this product on our website.

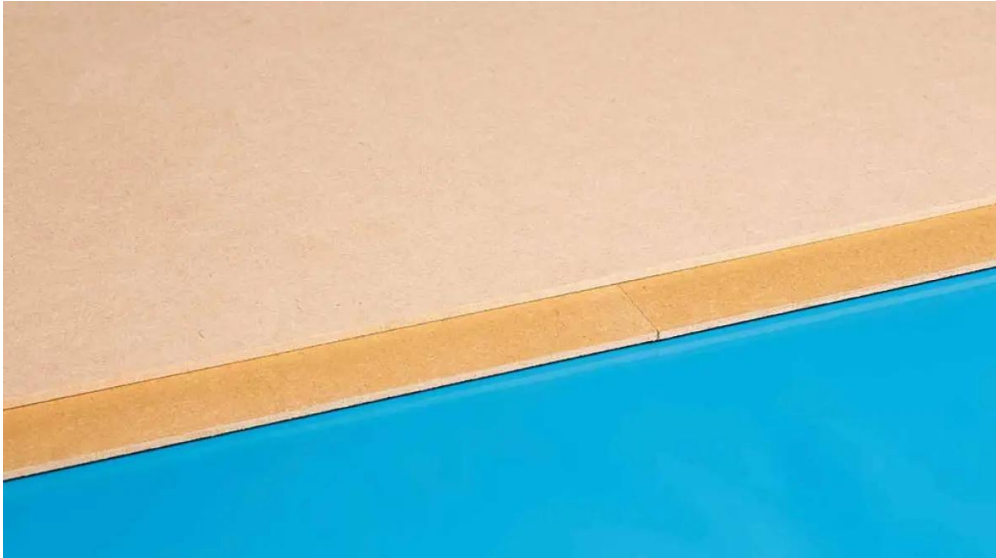

## Installation instruction

- Acclimatise Floorfixx horizontally for at least 48 hours in its closed packaging, stacked no more than 5 panels high, in the room where it will be installed.
- Relative humidity must be between 50–70% and the ideal installation temperature is 15–20 °C.
- Ensure the subfloor is completely dust-free and dry before installation.
- Always install a vapour barrier PE foil first, with a minimum thickness of 150 µm.
- Allow the foil to run up the wall/skirting by approximately 5 cm. The foil strips must overlap by approx. 20 cm or be taped.
- Floorfixx consists of two components:
  - a) An MDF base panel with an insulating underlayer and a top layer with interactive adhesive, covered with protective foil.

# Floorfixx regular 9 mm: 120 cm x 60 cm (2,88 m<sup>2</sup>)

Art. nr - 62200

**estillon**  
WE WILL IMPROVE YOUR FLOOR

b) An MDF top panel with interactive adhesive.

The system is formed by removing the protective foil and firmly pressing or rolling the top panel onto the base panel.

- For installation instructions, please refer to the Floorfixx regular product page.
- Leave a 10 mm expansion gap along walls, heating pipes and other fixed objects to allow the floor to move.
- Floorfixx can easily be cut to size using a concave knife. Tip: use other panels as a straight edge for a clean cut.
- After installation, roll the entire floor with a heavy 50 kg roller in both lengthwise and widthwise directions.
- Install the floor covering within 24 hours after installing Floorfixx.
- For bonding the floor covering, we recommend using a suitable adhesive applied with a paint roller or a fine-toothed A1/A2 trowel. Always respect the adhesive manufacturer's recommended open time.
- If the room exceeds 10 metres in length and/or width, an expansion joint must be installed every 10 metres in both Floorfixx and the floor covering.
- For optimal results, lightly sand the joints by hand (grit 80) and check for height differences.

**Important:** Do not install floor coverings thinner than 2 mm to prevent telegraphing. Floorfixx is not suitable for damp rooms. Floorfixx cannot prevent indentations in the floor covering; protective felt pads can help reduce them. Floorfixx levels a maximum height difference of 3 mm over 1 linear metre. Work cleanly, do not walk on the adhesive layer, and keep it free of dust and dirt.

## Top side

MDF

## Disclaimer

If the installation instructions are not followed, Estillon cannot be held liable for damage and/or claims arising from incorrect installation. If in doubt, always consult your supplier.