


# Floorfixx comfort 10 mm: 120 x 60 cm (2,88 m<sup>2</sup>)

Art. nr - 62210

**estillon**  
WE WILL IMPROVE YOUR FLOOR

Scan this QR code to view this product on our website.

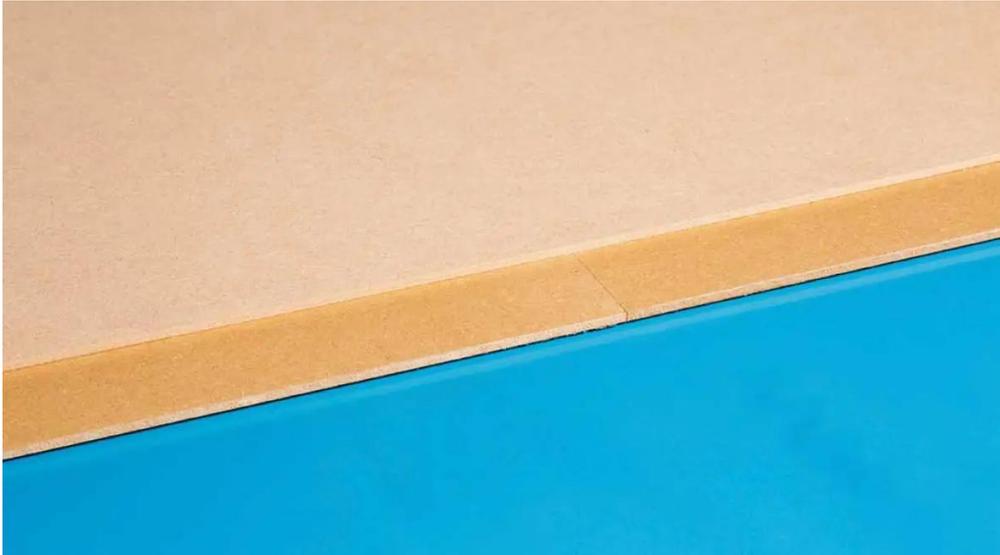

## Installation instruction

- Acclimatise Floorfixx horizontally for at least 48 hours in its closed packaging in stacks of no more than 5 units in the room where it will be installed.
- The humidity should be between 50-70% and the ideal processing temperature is 15-20 degrees Celsius.
- Ensure the subfloor is completely dust-free and dry before installation.
- Always apply a damp-proof PE foil with a minimum thickness of 150 µm first.
- Allow the foil to stand approximately 5 cm against the skirting board/wall. The strips of foil should overlap by about 20 cm or the seams must be taped.
- Check the installation instructions on the insert sheet.
- Floorfixx consists of two parts: a) An MDF base board with insulating underlayer and a top layer featuring an interactive adhesive, covered with protective film. b) An MDF top board

# Floorfixx comfort 10 mm: 120 x 60 cm (2,88 m<sup>2</sup>)

Art. nr - 62210

**estillon**  
WE WILL IMPROVE YOUR FLOOR

featuring an interactive adhesive. The system is created by placing the MDF top board onto the base board after removing the protective film and pressing/rolling it firmly.

- For laying instructions, please refer to the Floorfixx Comfort product page.
- Maintain a 10 mm gap along walls, heating pipes, and other fixed objects to allow the floor room to expand.
- Floorfixx can easily be cut to size with a concave knife. Tip: Use other boards as a square during cutting to ensure a clean edge.
- After installation, roll the entire floor with a heavy 50 kg roller in both the length and width of the floor.
- Install the floor covering within 24 hours of installing Floorfixx.
- For gluing the floor covering, we recommend using a suitable adhesive applied with a microfiber roller or a fine-toothed A1/A2 notched trowel. To avoid moisture issues, strictly follow the adhesive manufacturer's recommended open time.
- For dimensions exceeding 10 meters in length and/or width, an expansion joint must be created every 10 meters in both Floorfixx and the floor covering.
- For optimal results, we recommend lightly sanding the seams by hand (80 grit) and checking for height differences.

**Important:** Do not install floor coverings < 2 mm to prevent telegraphing issues! Floorfixx is not suitable for damp rooms! Floorfixx cannot prevent indentations in the floor covering; use felt pads to limit these. Floorfixx levels a maximum height of 3 mm over 1 linear meter. Work cleanly, do not walk on the adhesive layer, and ensure it remains free of dust and dirt.

## Top side

MDF

## Disclaimer

If the installation instructions are not followed, Estillon cannot be held liable for damage and/or claims arising from incorrect installation. If in doubt, always consult your supplier.